 




**To set static DNS servers on your Linksys router:**

1. Open a web browser on a computer or WiFi device that is connected to your Linksys router.
2. Type <http://linksysmartwifi.com> in the web browser address bar. You are prompted to log in to your router.
3. Enter **admin** for the user name, if asked, and **admin** for the password.

If you changed your admin password, enter the password that you created.

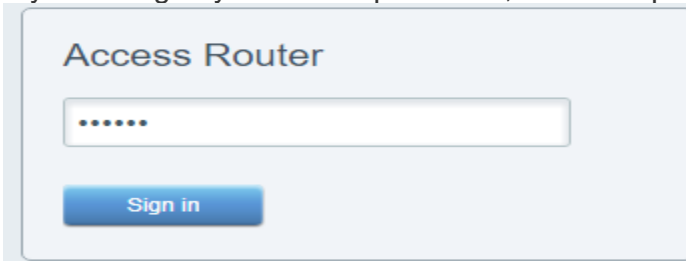

  4. Click **Connectivity**.

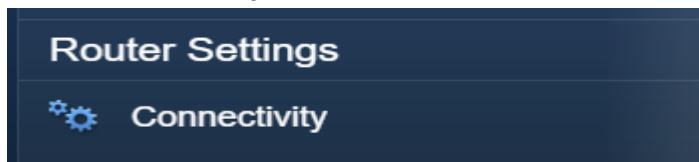


Then click on the **Local Network** tab.

5. Input the following DNS address in *Static DNS 1*:

Client lease time:	<input type="text" value="1440"/>	Minutes		
Static DNS 1:	<input type="text" value="209"/>	<input type="text" value="58"/>	<input type="text" value="180"/>	<input type="text" value="215"/>
Static DNS 2:	<input type="text" value="198"/>	<input type="text" value="7"/>	<input type="text" value="62"/>	<input type="text" value="199"/>

6. Click **Apply**.

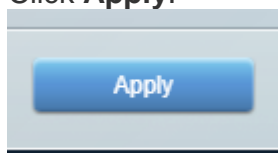

Your settings are saved.